



TIGERTECH[®]


Mechanical Password lock Series

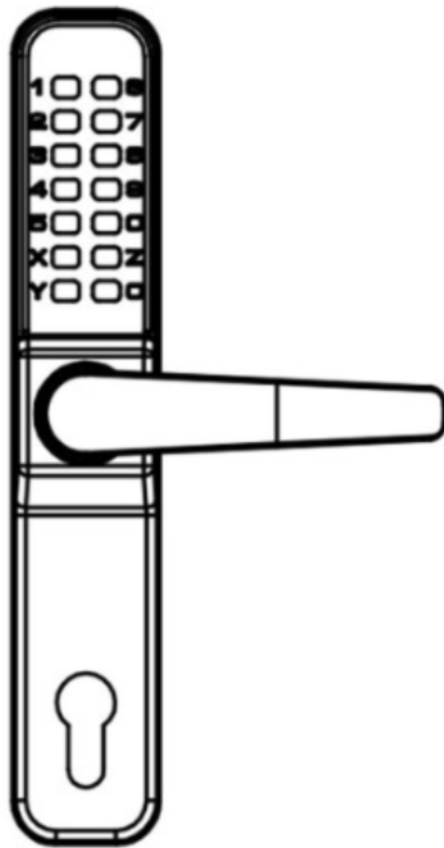

Main Part List

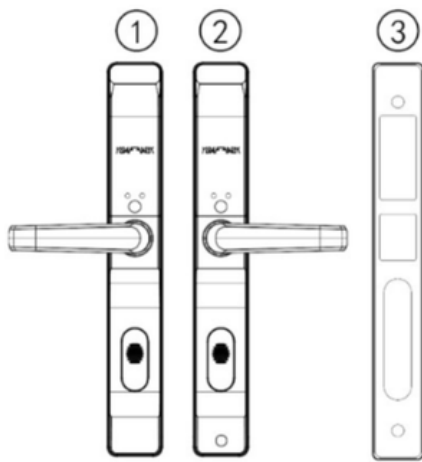

- 1) Front Lock
- 2) Rear lock/Handle
- 3) Rubber Seal
- 4) Strike Plate
- 5) Plastic strike Shell
- 6) Mortice lock
- 7) Installation Screws
- 8) Connecting Rods
- 9) Square Spindle
- 10) Screw Hole Plug
- 11) Manual
- 12) Mortice lock Screws
- 13) Shim Plate **(For 50mm tube)**

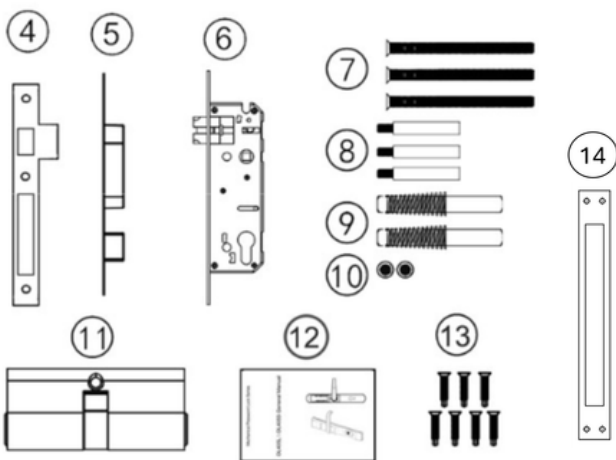

1. Installation Instructions

Check Parts: Ensure all parts function normally before starting.

Password Guidelines: Passwords are non-sequential and cannot repeat digits. A 4-6 digit code is recommended for security and lock longevity.


Verification: Confirm the lock operates correctly after setting the password. Verify the lock cylinder and body open/close freely with keys.

Engineering Key: Used only by installers. Once the Master key is used, the engineering key becomes invalid.


Adjustments: Cut the square pole and installation screws according to your door's thickness.

2. Adjusting Handle & Square Hole

Handle Direction: Loosen the handle screw with a screwdriver, remove the handle, adjust to the desired direction, and re-tighten.

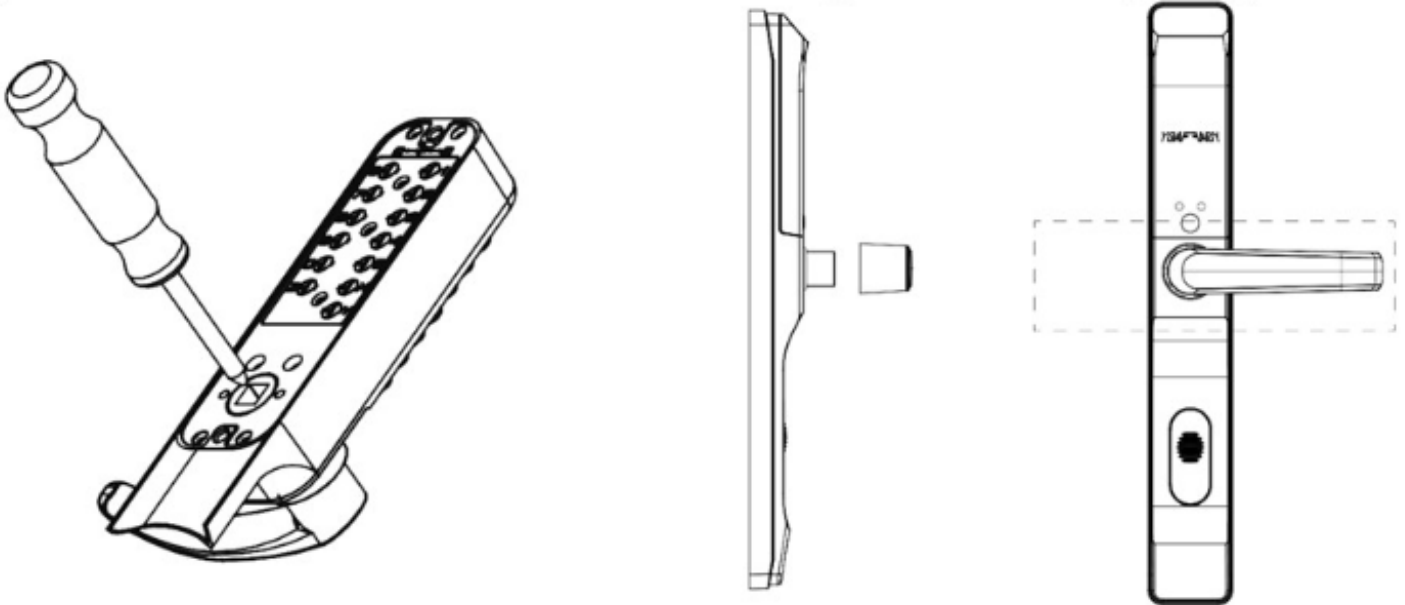

Square Hole Alignment: Insert the square pole into the hole about 5mm. Rotate it so the triangle on the square hole faces the same direction as the handle.

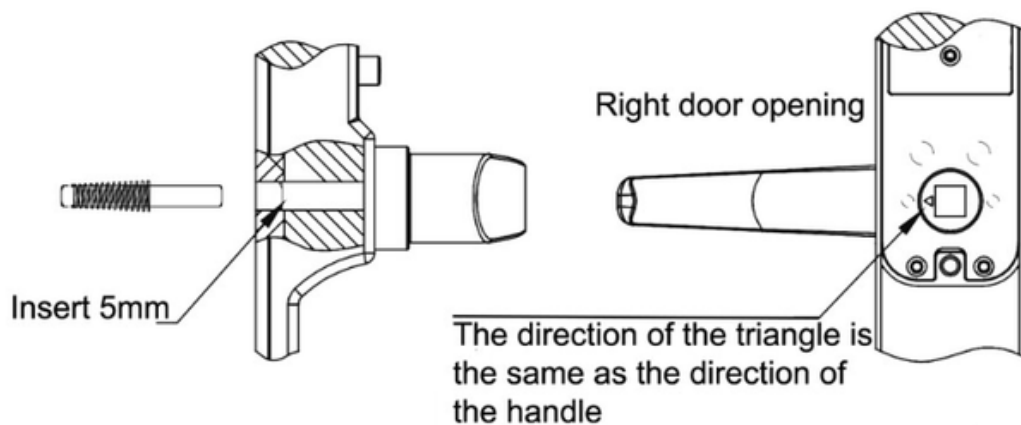

3. Detailed Installation Steps

Make the holes on the door according to actual installation position and panel hole position.

Insert the lock body to the door and fix it by 4 pieces of screws.

If lock is installed on 50mm tube use shim-plate for proper installation.

Insert 2 square poles (the end with the spring) into both sides of the lock body; the square poles need to be higher than the door surface by about 30mm.




Install 2 PCS connecting rods to the front panel.


Install the plastic base plate to the front panel and rear panel.

Install the front and rear panel to the lock body and hold them, then use installation screws to fix.

Test if it can unlock by password and key; if no, please resolve the issue and reinstall.

Press the rubber stopper to the screws hole of the rear panel.

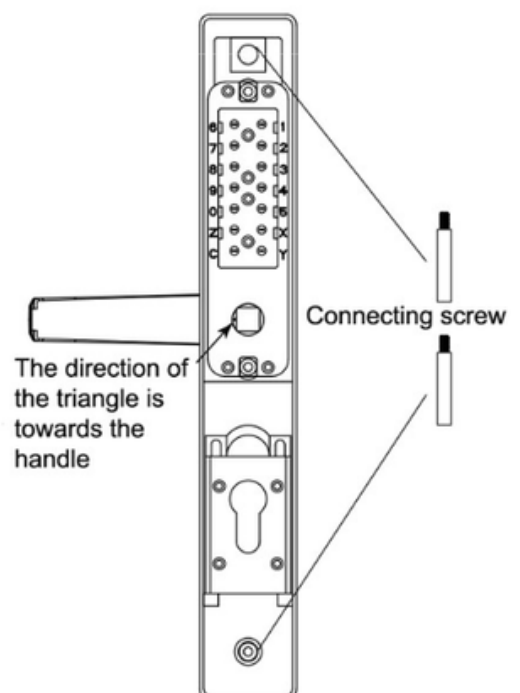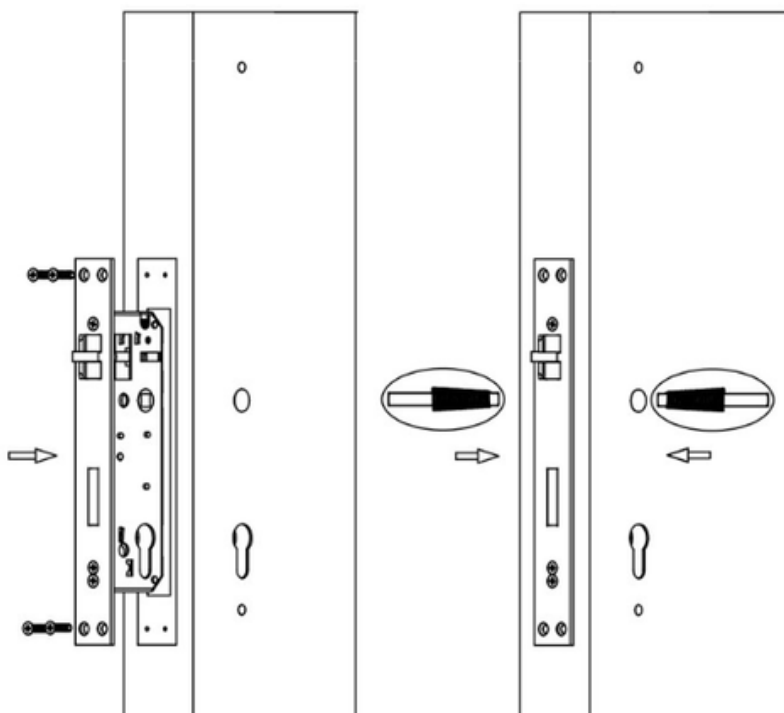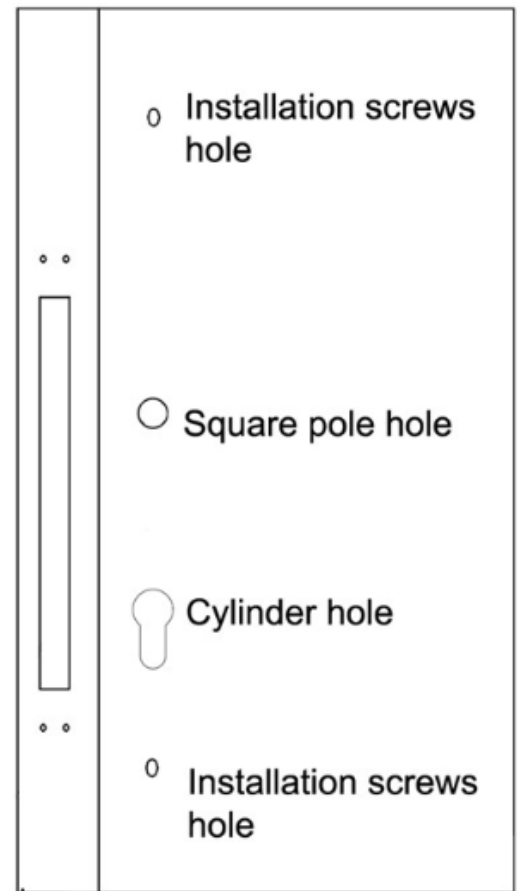

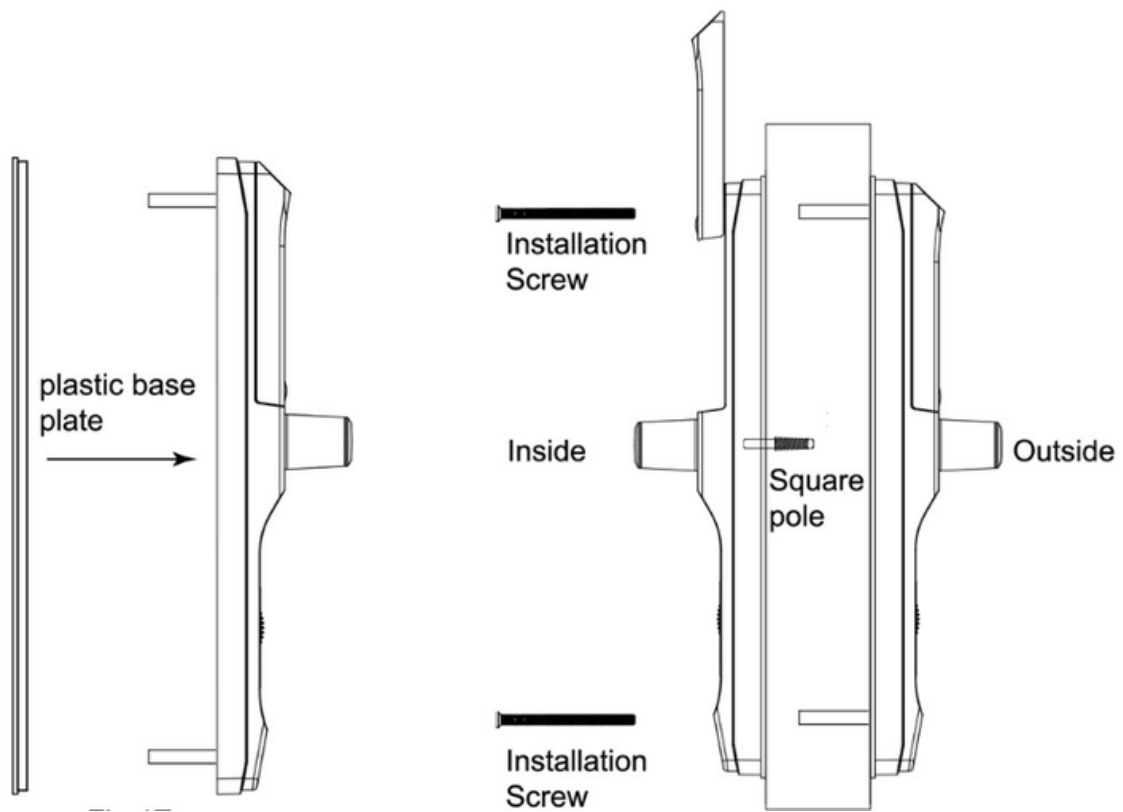


4. Password Settings

Tips : There is no password when it leaves the factory. "Y" and "C" keys are function keys and cannot be set as passwords. "C" is the reset/clear key; if you put in the wrong password, press "C" to reset and enter it again.

No Password State: The small dots on both sides face towards the center location (F).

Setting Password: Use a flat screwdriver to push down the new password button. Rotate it 180 degrees to align the dots with the numbers or letters.

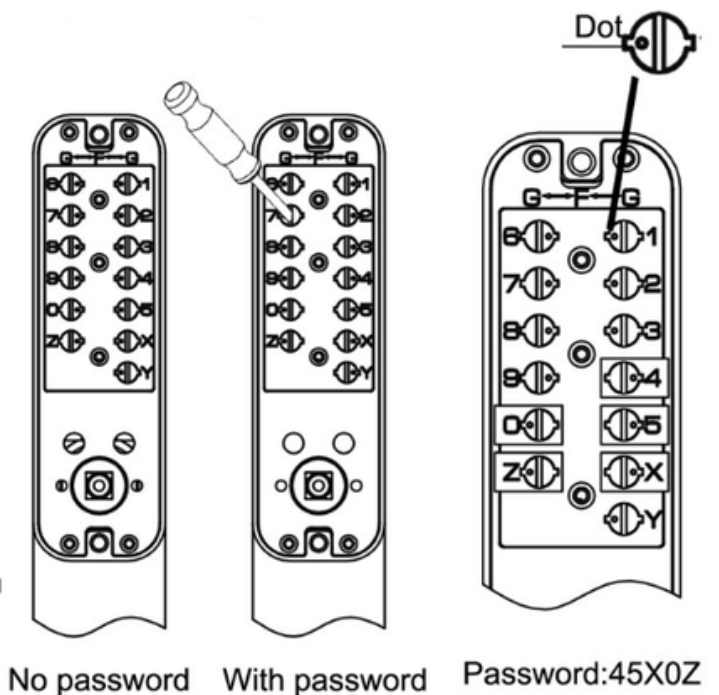

5. Normal Open Mode

Setting: Enter the correct password, then press down the handle and hold it, press the "Y" key, and release the handle then release the "Y" key.

Canceling: Press the "C" and hold. Press down the handle and hold it, then release the "C" key and release hands.