


Beninca Brainy24+



2-Wire Configuration


- Relying on the physical limit switches to learn where to stop
- Select "NLSU" option during Auto Setup

- Motor Positive
- Motor Negative

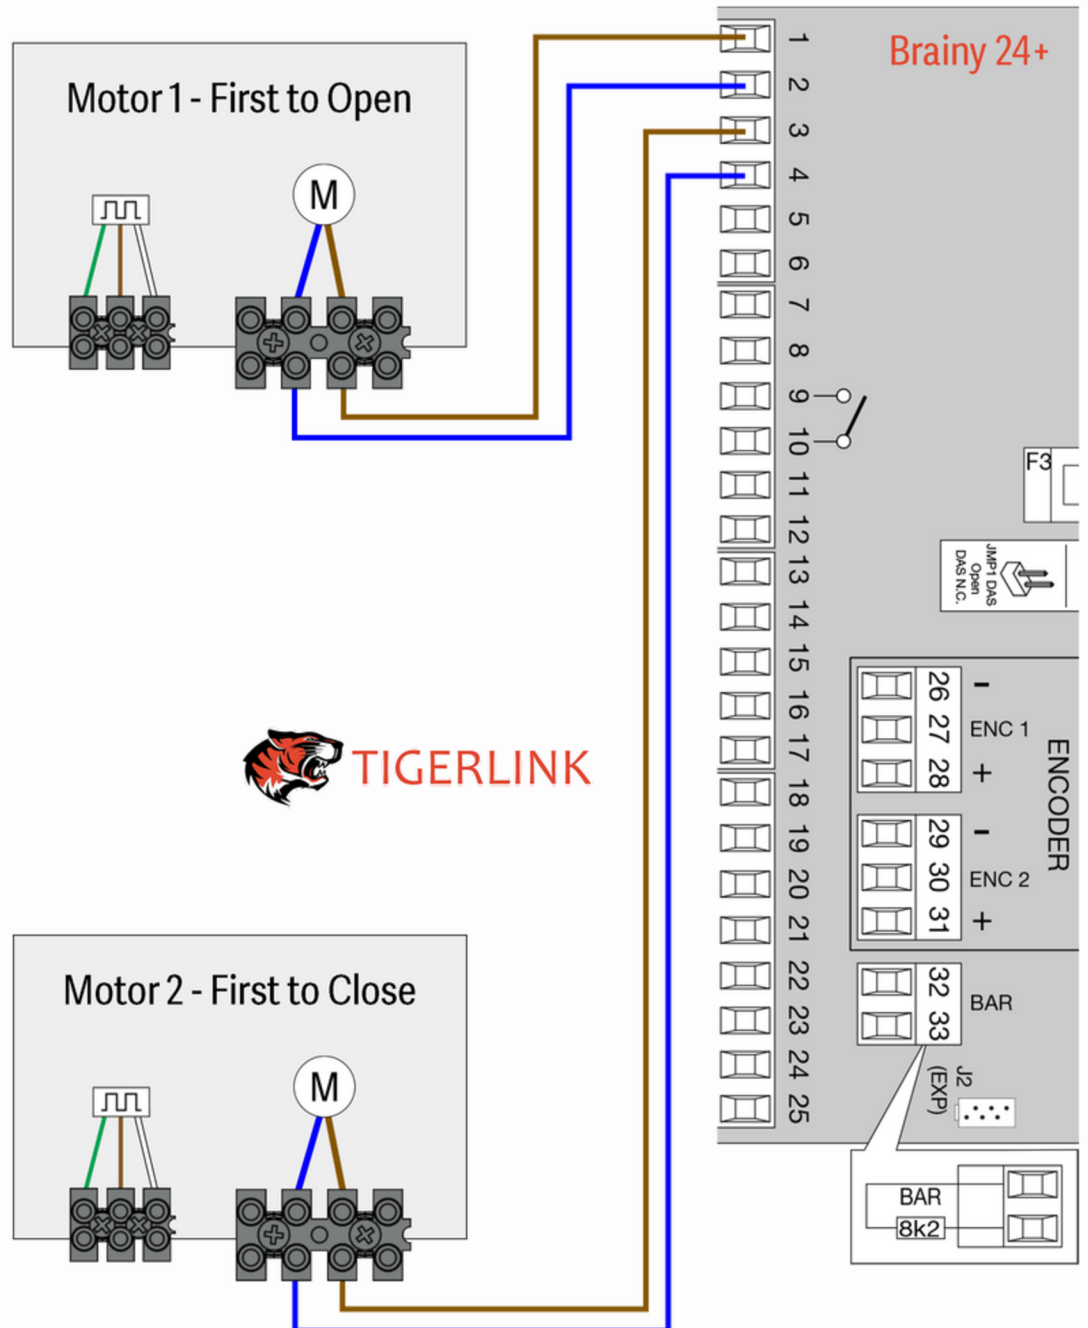

5-Wire Configuration

- Relying on the encoders and physical limit switches to learn where to stop
- Select "ENC" option during Auto Setup

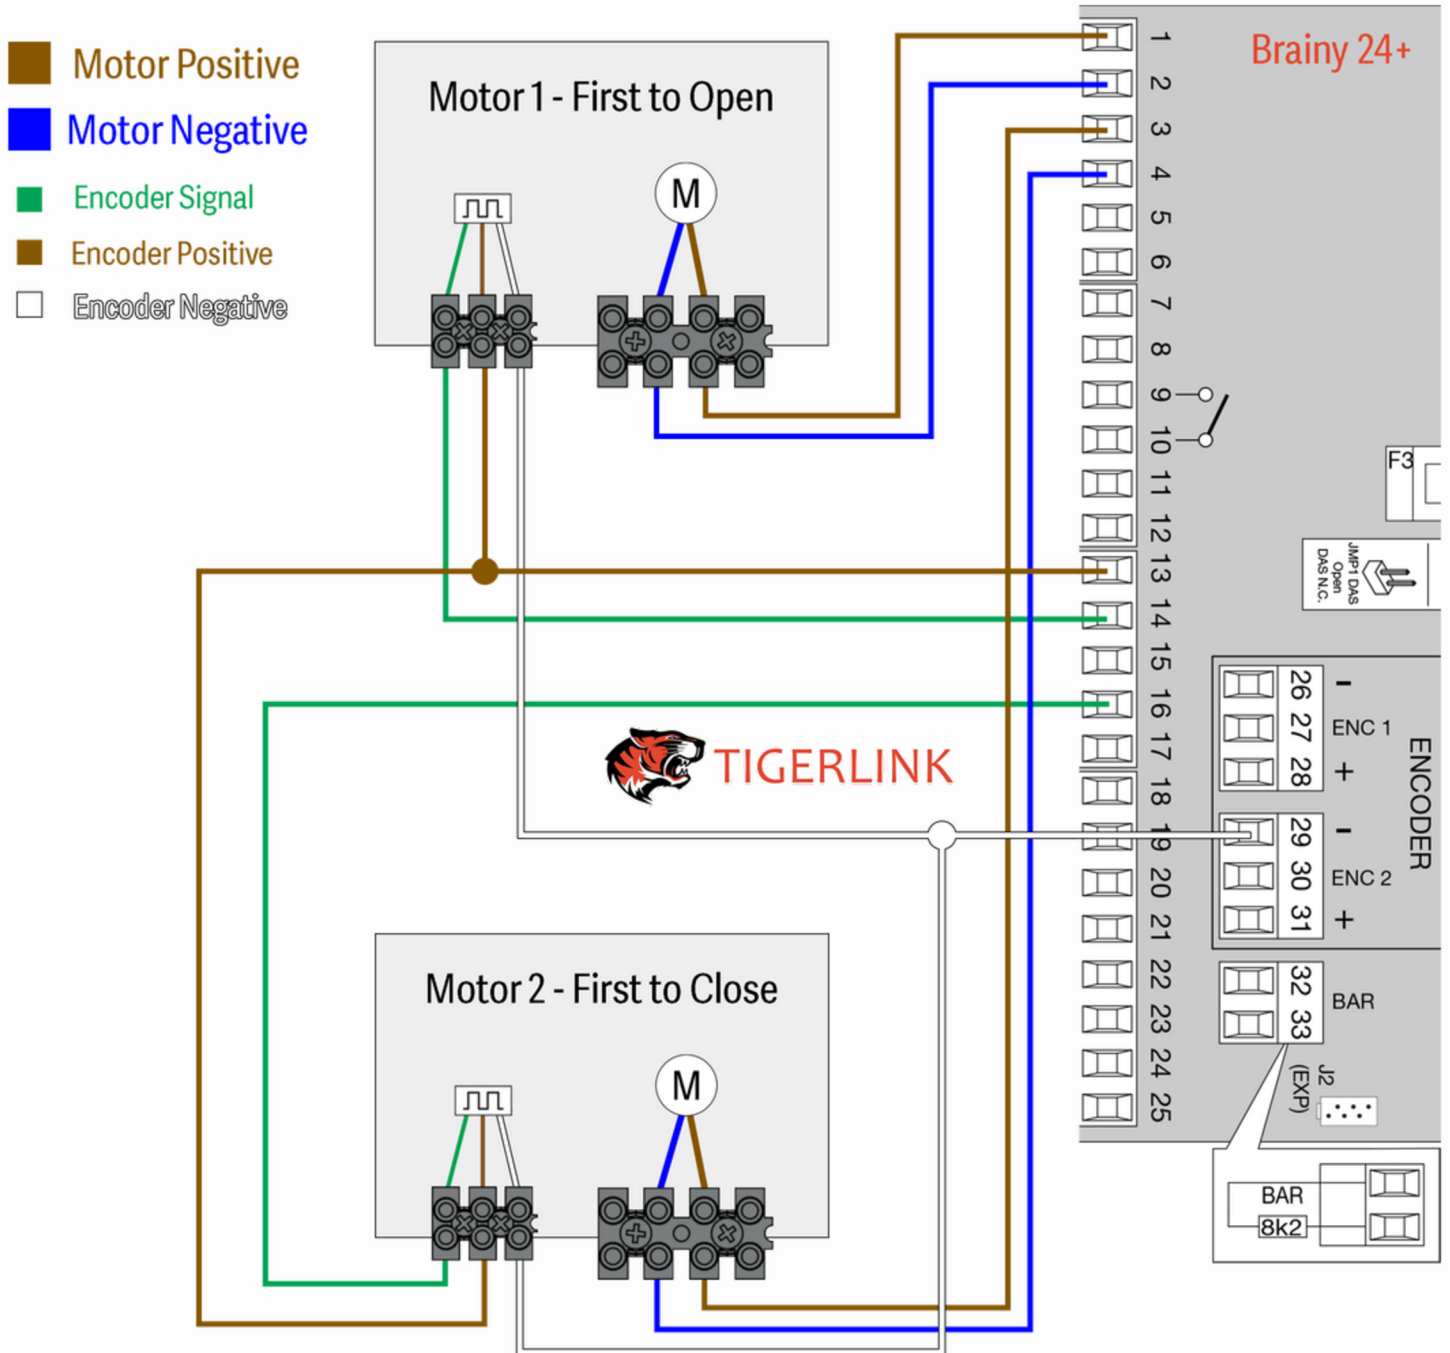

*** If the motors are moving in the opposite direction of what the control board says, switch the Motor Positive and Motor Negative wires around. It's related to inwards/outwards opening direction of your gate.