


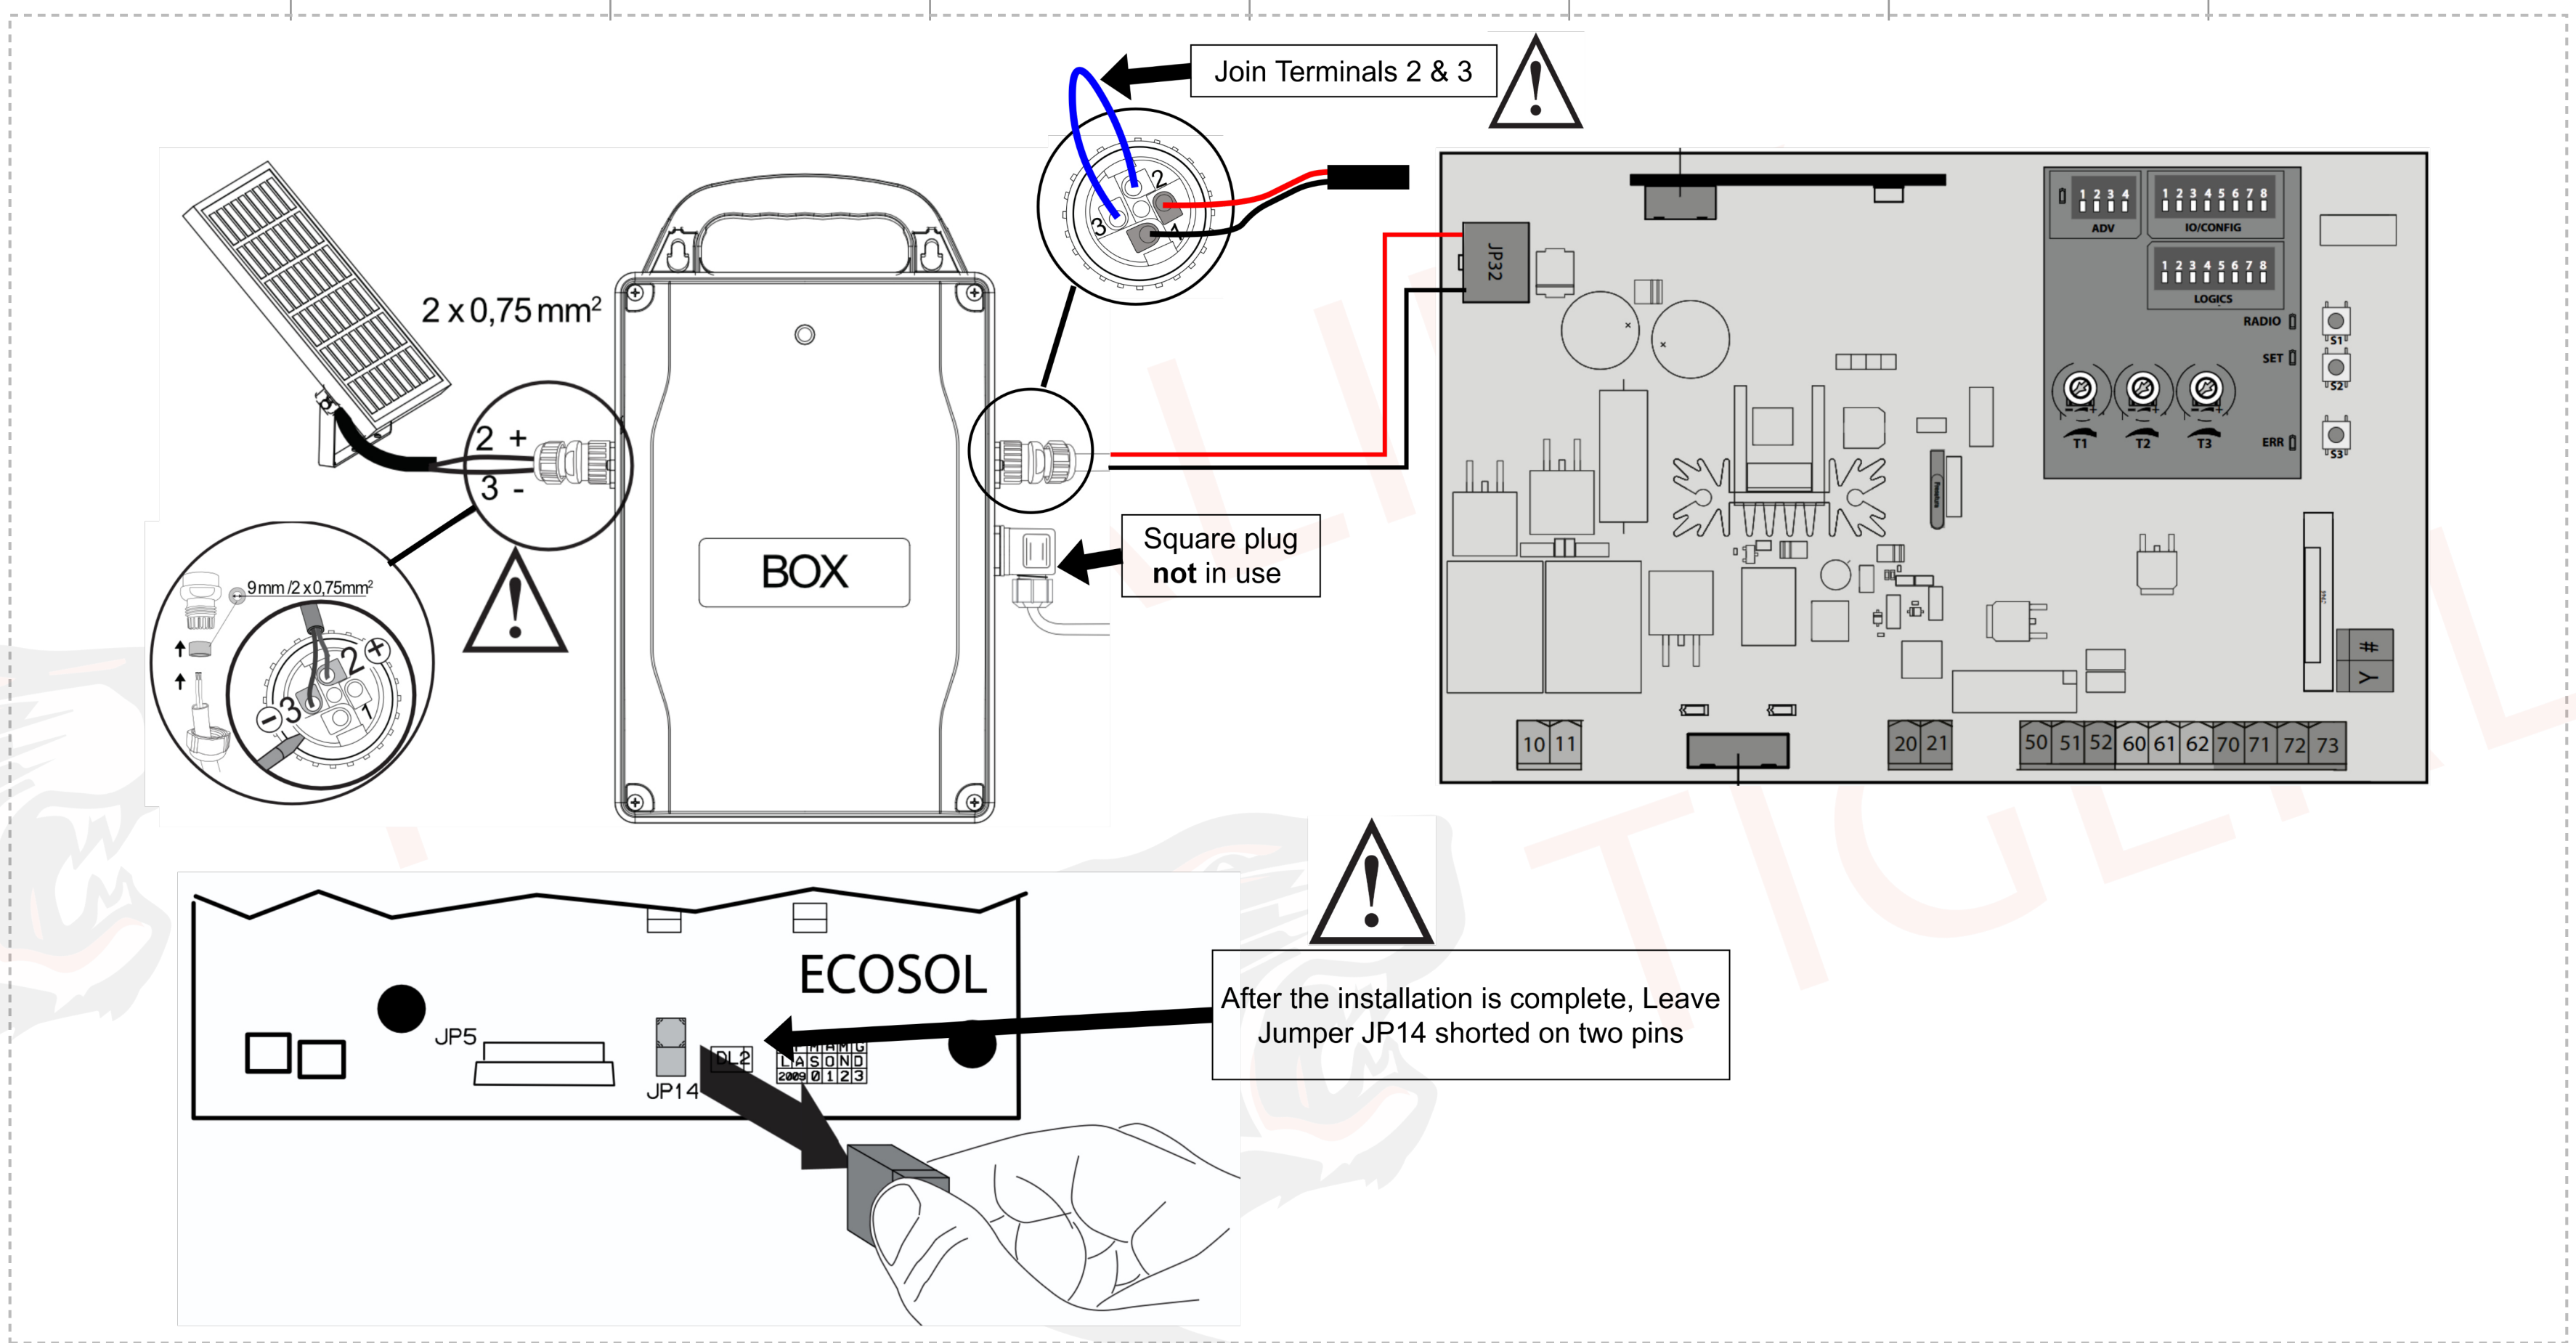

NOTES

1. Ensure power is disconnected before making or altering wiring connection.
2. Confirm polarity before first power-on.
3. All electrical wiring must be installed by a licensed electrician in accordance with local regulations.
4. Tigerlink is not responsible for any errors, damage, injury, or loss resulting from improper installation or incorrect wiring.

WIRE COLOR LEGEND

- Positive 24V dc
- Negative
- Jumper wire



TIGERLINK

PRODUCT / ASSEMBLY:

BT B400/600 & Ecosol

DRAWING NO.

WD-0007

REV.

A

SHEET

1 OF 1

DRAWN BY

J.W.

CHECKED BY

J.W.

DATE

07-09-2026